

TIRES

Proper air pressure will provide maximum stability, riding comfort and tire life.

Check tire pressure frequently and adjust if necessary.

NOTE: Check tire pressure when the tires are "cold", before you ride.

		Front	Rear
Tire size		2.75-21-4PR	4.00-18-4PR
Cold tire pressures kpa (kg/cm ² , psi)	Standard	150 (1.5, 21)	150 (1.5, 21)
	Competition use	50 (0.5, 7)	30 (0.3, 4)

Check the tires for cuts, imbedded nails or other sharp objects. Check the rims for dents or deformation. If there is any damage, see your authorized Honda dealer for repair, replacement, and balancing.