

## FUEL AND OIL

### Fuel Tank

The fuel tank holds 4.0 liters (1.06 U.S. gal., 0.88 Imp. gal.). To open the fuel cap (1), pull off the breather tube (2) from the steering stem nut and turn the cap (1) counterclockwise. Use low-lead gasoline with an octane number of 91 or higher. If this is not available, leaded regular gasoline can be used.

#### FOR NEW SOUTH WALES ONLY:

Use unleaded fuel with a research octane number of 91 or higher. After refueling, be sure to tighten the fuel tank cap firmly by turning clockwise until the arrow (3) on the cap faces forward. Insert the breather tube into the steering stem nut.

