

5. Remove the strainer screen (4) and wash it in clean solvent.
  6. Install the strainer screen (4), spring (5) and oil strainer cap (3), making sure that the sealing rubber and O-ring are in good condition.
  7. Fill with approx. 1.1 liters (1.2 U.S. qt., 0.1 Imp. qt) of recommended grade oil. Check the oil level. Add oil if necessary.
- CAUTION: Change the oil more frequently than recommended on page 72 depending upon the severity of dust conditions.**
8. Install the skid plate and engine cushion rubber. Tighten the bolt and nuts securely.

