

4. Remove the index mark cap, generator rotor cap and two tappet covers (6).
5. Rotate the generator rotor counterclockwise and align the "T" mark (7) with the index mark (8). Make sure the piston is at the top of the compression stroke by feeling the tappets with your fingers. If the tappets are free, it is an indication that the piston is at the top of the compression stroke. If the tappets are tight, rotate the generator rotor 360° and re-align the marks.

