

Cam Chain Adjustment

1. Start the engine and set the idle speed.
2. Remove the rubber cap and loosen the cam chain adjuster (1) [not the 6 mm sealing bolt (2)]. This will automatically apply the proper tension to the cam chain.
3. After completing the adjustment , tighten the adjuster securely.

