

Throttle Operation

1. Check for smooth rotation of the throttle grip from the fully open to the fully close position at both full steering positions.
2. Check the throttle grip free play at the grip. Standard play is approx. 2–6 mm (1/8–1/4 in.) at the grip flange. To adjust the play, loosen the lock nut (1) and turn the adjuster (2).

