

Drive chain lubrication:

1. Carefully remove the master link retaining clip (1) with pliers. Remove the drive chain by removing the master link.
2. Clean the drive chain in solvent and allow to dry.
3. Inspect the chain for wear (sloppy joints), stiffness and binding at the joints, and broken or separated rollers. If damaged or worn, the chain should be replaced.
4. Lubricate the drive chain by applying a liberal amount of engine oil or chain lubricant.
5. Reinstall and adjust the drive chain.

NOTE: Install the retaining clip (1) so that the closed end of the clip is in the normal direction of rotation.

