

## BRAKES

### Front brake adjustment:

1. Raise the front wheel off the ground by placing a support block under the engine, spin the front wheel by hand and measure the free play distance that the front brake lever moves before the brake starts to engage.
2. Free play, measured at the tip of the brake lever (1), should be 10–20 mm (0.4–0.8 in) at the lever.
3. Pull back the rubber dust cover (2). Loosen the lock nut (3) and turn the brake cable adjuster (4). Tighten the lock nut (3), and check adjustment.  
(A) Decrease free play  
(B) Increase free play

