

3. If adjustment is necessary, turn the rear brake adjusting nut (4).
4. Apply the brake several times and check for free wheel rotation when released.

NOTE: Make sure that the cut-out on the adjusting nut is seated on the brake arm pin after the final adjustment has been made.

(A) Decrease free play

(B) Increase free play

