

//////////////////// OPERATION //////////////////////////////////////

PRE-RIDE INSPECTION

WARNING

** Failure to conduct the listed maintenance checks and adjustments may lead to equipment failure that could cause an accident.*

Inspect your FOUR TRAX every day before you ride it. The items listed here will only take a few minutes to check and in the long run can save time, expense, and possibly your life.

1. Engine oil level – if required add engine oil (page 22). Check for leaks.
2. Fuel level – fill the fuel tank when necessary (page 20). Check for leaks.
3. Brakes – check operation; make sure there is no brake fluid leakage. If necessary adjust free play (pages 58–62).
4. Tires – check condition and pressure (pages 24–25).
5. Drive chain – check condition and slack (page 64). If necessary adjust and lubricate.
6. Throttle – check for smooth opening and closing in all steering positions (page 63).
7. Headlight switch – check for proper function (page 11).

8. Engine stop switch – check for proper function (page 10).
9. Nuts, Bolts, Fasteners – check the wheels to see that the axle nuts are tightened and secured by cotter pins. Check the security of all other nuts, bolts and fasteners.
10. Steering – check that the wheels turn properly as you steer the handlebars.

Correct any discrepancy before you ride. Contact your authorized Honda dealer for assistance if you cannot correct the problem.