


ENGINE OIL STRAINER SCREEN

1. Drain the engine oil.
2. Remove the nut (2) from the reverse shift shaft, and remove the reverse shift arm (3). Disconnect the reverse shift cable (1) from the shift arm.
3. Remove the right crankcase cover (4) by removing the cover bolts.
4. Remove the oil filter screen (5) from the crankcase.
5. Clean the filter screen.

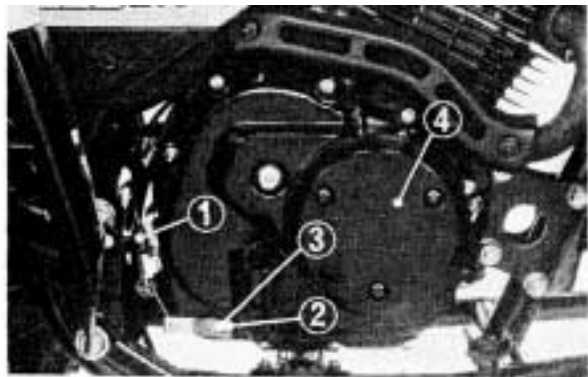

(1) Cable
(2) Nut

(3) Reverse shift arm
(4) Crankcase cover

Installation

- Reinstall the oil filter screen by reversing the disassembly sequence.
- Tighten the right crankcase cover bolts to 10–14 N·m (1.0–1.4 kg-m, 7–10 ft-lb) torque.

WARNING

- * *If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly.*



(5) Oil filter screen