

### Reverse and Neutral Indicator Lamps

The reverse indicator lamp (1) and the neutral indicator lamp (2) (Fig. 2-10) are next to the ignition switch.

The reverse indicator lamp will light when the transmission is in reverse and the ignition switch is ON ( I ). The neutral indicator lamp will light when the transmission is in neutral and the ignition switch is ON ( I ).

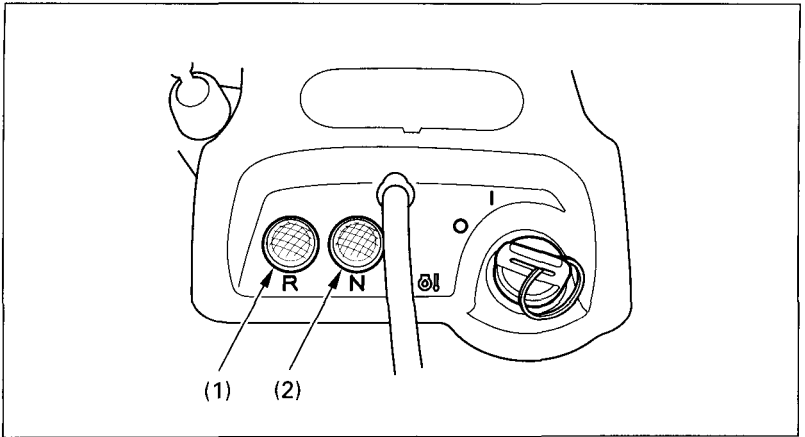


Fig. 2-10

- (1) Reverse indicator lamp
- (2) Neutral indicator lamp