

Is Your ATV Ready to Ride?

<i>Brakes</i>	Squeeze the front brake lever and step on the rear brake pedal to check that the controls operate normally. Check for proper freeplay (page 123). Make sure there is no brake fluid leakage (page 120).
<i>Clutch Lever/ Parking Brake Lever</i>	Check for smooth operation and adjust if needed (page 106).
<i>Reverse Assist Lever</i>	Check the freeplay and adjust if needed (page 110). Make sure the lever operates smoothly without sticking.
<i>Headlight and Headlight Dimmer Switch</i>	Check for proper function (page 19).
<i>Engine Stop Switch</i>	Check for proper function (page 18).
<i>Steering</i>	Check that the wheels turn properly as you steer the handlebar. Move the handlebar right and left and check that there is no excessive backlash.

Remember, be sure to take care of any problem you find, or have your Honda dealer correct it before you ride.