

Engine Oil

Changing Engine Oil

Refer to *Safety Precautions* on page 75 .

NOTICE


Using the wrong oil filter may result in leaks or premature engine damage.

This procedure requires mechanical skill and professional tools such as a torque wrench, as well as a means for disposing of the drained fluid (page 156). If you do not have the skills or the tools, see your Honda dealer.

Drain the Engine Oil:

1. With the ATV on level ground, remove the oil filler cap from the left side of crankcase.
2. Place an oil drain pan under the crankcase and remove the oil drain plug (1).

UNDER ENGINE

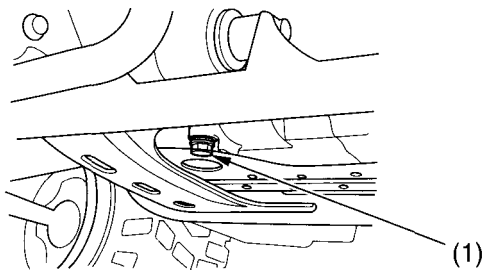

(1) oil drain plug