

Spark Plug

Spark Plug Recommendation

standard spark plug	DPR8EA-9 (NGK) or X24EPR-U9 (DENSO)
for cold climate (below 5°C, 41°F)	DPR7EA-9 (NGK) or X22EPR-U9 (DENSO)

Use only the recommended type of spark plug in the recommended heat range.


NOTICE

Using spark plugs with an improper heat range can cause engine damage.

Spark Plug Replacement & Inspection

Refer to *Safety Precautions* on page 75 .

1. Clean any dirt from around the spark plug base.
2. Disconnect the spark plug cap (1). Take care to avoid damaging the spark plug wire when disconnecting the cap.
3. Using the spark plug wrench, remove the spark plug.

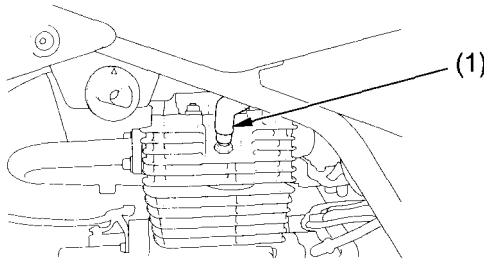

(1) spark plug cap

(cont'd)