


3. Push down the parking brake pin (3) and then squeeze the clutch/parking brake lever (4) until firm resistance is felt. Measure the distance the clutch/parking brake lever has moved; the distance should be:

15–20 mm (0.6–0.8 in)

## LEFT HANDLEBAR

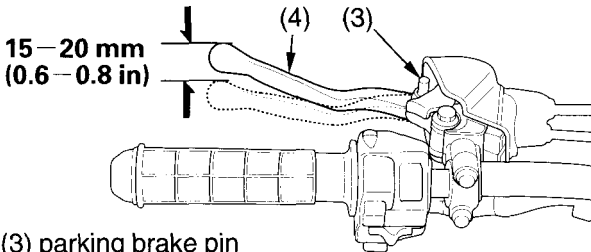

- (3) parking brake pin  
(4) clutch/parking brake lever

4. After parking brake adjustment is completed, adjust the clutch freeplay to the correct specification (page 106).

Check the clutch/parking brake lever and parking brake cable for loose connections or other damages. If the parking brake cable is worn or kinked, have it replaced by your Honda dealer.

## Other Inspections & Lubrication

- Check that the clutch/parking brake lever assembly is positioned properly and the securing bolts are tight.
- Check the parking brake cable for kinks or signs of wear. If necessary, have it replaced.
- Lubricate the parking brake cable with a commercially-available cable lubricant to prevent premature wear and corrosion.