


12. If adjustment is necessary, loosen the adjusting screw lock nut (9) and turn the screw (10) so that there is a slight resistance when the feeler gauge (11) is inserted.
13. After adjustment, tighten the lock nut while holding the adjusting screw to prevent it from turning.
14. Recheck the clearance to make sure that it has not changed.
15. Reinstall the removed parts.

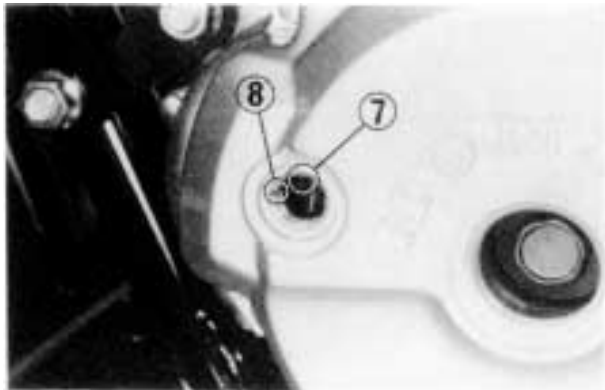

(7) T mark      (8) Index mark



(9) Lock nut      (11) Feeler gauge  
(10) Adjusting screw