


CLUTCH

1. Make sure the ignition switch is OFF.
2. Loosen the lock nut (1), and turn the clutch adjuster (2) counterclockwise until you feel resistance. Then turn the adjuster 1/4 turn clockwise, and tighten the lock nut to hold the adjuster in this position.
3. After adjustment, start the engine and test ride the FOURTRAX to be certain that the clutch is operating properly.

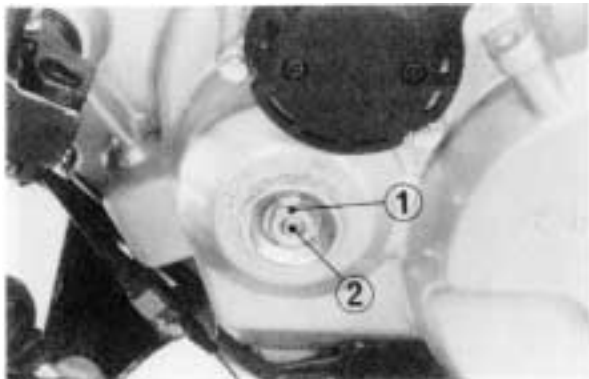

(1) Lock nut


(2) Clutch adjuster

AIR CLEANER CASE DRAIN TUBE

- Remove drain tube by removing clip (1) and drain the deposits.
- Reinstall the drain plug.

NOTE:

- * Service more frequently before starting the engine, or when deposits can be seen in the transparent section (2) of the drain tube.

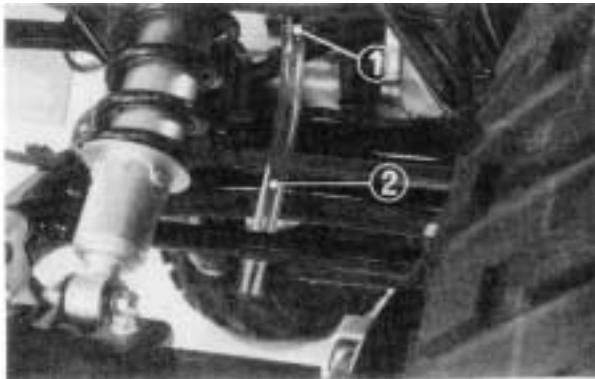

(1) Clip

(2) Transparent section