

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS		FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page	
			mi	km	100	600	1200		
			⇔		150	1000	2000		
			NOTE	HOURS	20	100	200		
EMISSION RELATED ITEMS	*	FUEL LINE					I	—	
	*	THROTTLE OPERATION					I	111	
	*	CARBURETOR CHOKE					I	113	
		AIR CLEANER	NOTE 1				C	C	106
		AIR CLEANER HOUSING DRAIN TUBE	NOTE 2				I	I	110
		SPARK PLUG					I	I	117
	*	VALVE CLEARANCE				I	I	I	120
		ENGINE OIL			R	R	R	R	98
	**	ENGINE OIL STRAINER SCREEN						C	—
	**	ENGINE OIL CENTRIFUGAL FILTER						C	—
	*	ENGINE IDLE SPEED				I	I	I	116

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 194).

\*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.