

# Brakes

---


## Brakelight Switch Adjustment

Refer to *Safety Precautions* on page 77.

### Rear Brake Only:

Check the operation of the rear brakelight switch (1) at the right side behind the engine from time to time. The brakelight should turn on at 0.6 in (15 mm) of pedal stroke. See *Rear Brake Pedal Freeplay*, page 123. Adjustment is done by turning the adjusting nut (2). Turn the nut in direction (A) if the switch operates too late and in direction (B) if the switch operates too soon.

### RIGHT SIDE

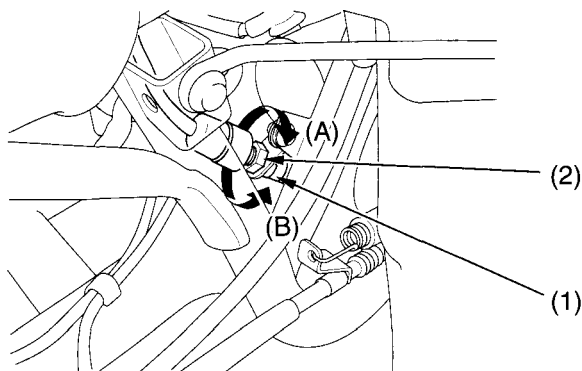

(1) brakelight switch

(2) adjusting nut