


# Indicators & Displays

## Odometer

When selected, the odometer (1) registers total distance traveled in kilometers while the ignition is ON (1). To change the display (2) from tripmeter to odometer, press and release the Odometer/Tripmeter select button (3).

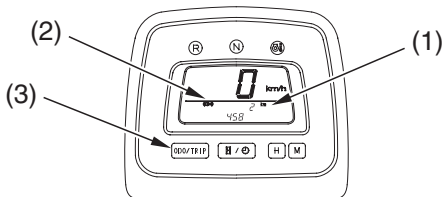


(1) odometer  
(2) “ODO”display

(3) odometer/tripmeter  
select button

## Tripmeter

When selected, the tripmeter (4) shows mileage per trip while the ignition is ON (1). To change the display (5) from odometer to tripmeter, press and release the Odometer/Tripmeter select button (6). To reset the tripmeter to zero, press the Odometer/Tripmeter select button and hold it in for at least 2 seconds.

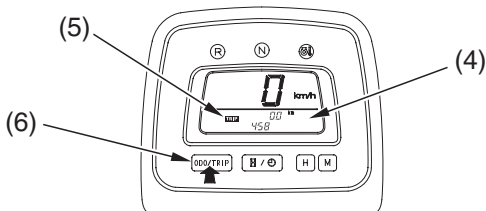

(4) tripmeter  
(5) “TRIP”display

(6) odometer/tripmeter  
select button