

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

	FREQUENCY ITEMS	WHICHEVER COMES FIRST ⇨ NOTE	km		mi		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
			150	1000	2000	2000	2000	2000		
			100	600	1200	1200	1200	1200		
			HOURS	20	100	200	200	200		
*	FUEL LINE							I		—
*	THROTTLE OPERATION							I		112
*	CARBURETOR CHOKE							I		114
	AIR CLEANER	NOTE 1						C	C	107–110
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2						I	I	111
	SPARK PLUG							I	I	119
*	VALVE CLEARANCE							I	I	122
	ENGINE OIL							I	I	98–104
								INITIAL=150km (100mi), 20 operating hours or 1 month : R REGULAR=Every 1000km (600mi), 100 operating hours or 12 months : R		
**	ENGINE OIL STRAINER SCREEN								C	—
**	ENGINE OIL CENTRIFUGAL FILTER								C	—
*	ENGINE IDLE SPEED							I	I	117

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Shop Manual.

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.