

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		NOTE	km	150	1000	2000	
			mi	100	600	1200	
		HOURS	20	100	200		
REAR FINAL GEAR CASE OIL					(R:EVERY 2 YEARS)	I	105 – 106
* BRAKE FLUID	NOTE 3					I	124 – 126
* BRAKE SHOE WEAR	NOTE 1					I	136
* BRAKE LIGHT SWITCH				I	I	I	137
BRAKE SYSTEM				I	I	I	124 – 138
* REVERSE LOCK SYSTEM				I	I	I	116
SKID PLATES, ENGINE GUARD						I	145
* CLUTCH SYSTEM				I	I	I	115
* SUSPENSION						I	—
* SPARK ARRESTER					C	C	123
* NUTS, BOLTS, FASTENERS				I		I	—
** WHEELS/TYRES				I	I	I	—
** TIE-ROD AND JOINT BOOTS				I	I	I	—
** STEERING SHAFT HOLDER BEARINGS						I	—
** STEERING SYSTEM						I	—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Shop Manual.

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.