

Choke Knob

The choke knob (Fig. 2-6) is located above the indicator lamp. The choke has two positions: fully ON (A) and fully OFF (B).

Pulling the choke knob up (on) allows the carburetor to deliver a rich fuel mixture for starting the engine when cold. Lower the choke knob to the fully OFF position as the engine attains normal operating temperature.

To restart a warm engine, it is not necessary to use the choke.

CAUTION:

Extended use of the choke may impair piston and cylinder wall lubrication and shorten the life of the engine.

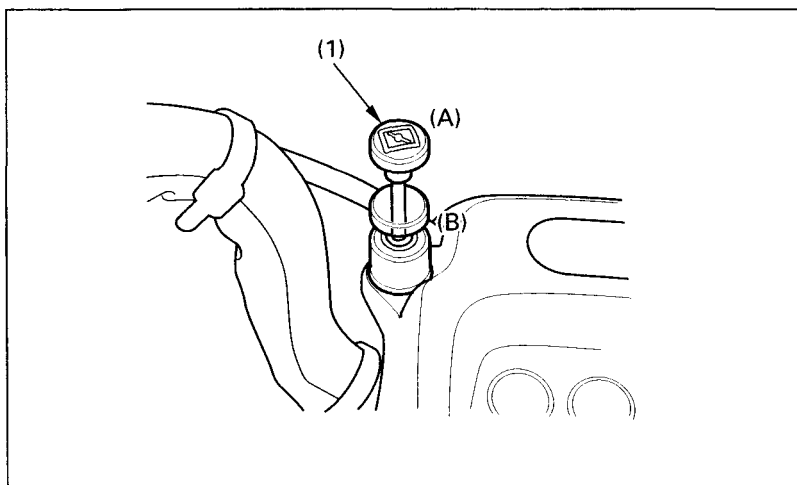


Fig. 2-6

(1) Choke knob

(A) Fully ON

(B) Fully OFF