

To adjust the free play, turn the brake pedal adjusting nut ( 1 ), (Fig. 4-25 ), located on the brake operating rod at the rear of the frame. Make sure the cut-out on the adjusting nut is properly seated on the brake arm pin ( 3 ).

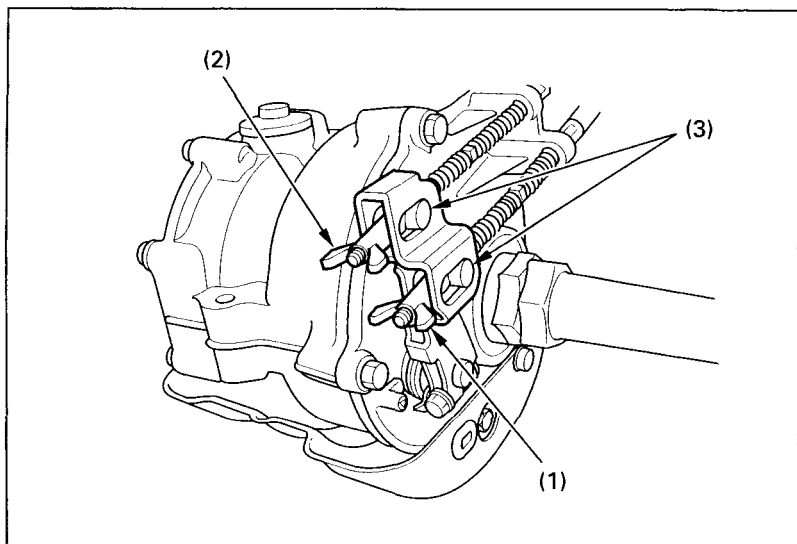


Fig. 4-25

(1) Brake pedal adjusting nut  
(2) Brake lever adjusting nut

(3) Brake arm pin