



# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		⇒	mi	100	600	1200	
			km	150	1000	2000	
		NOTE	HOURS	20	100	200	
*	FUEL LINE					I	—
*	THROTTLE OPERATION					I	103
*	CARBURETOR CHOKE					I	105
	AIR CLEANER	NOTE 1				C C	98
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2				I I	102
	SPARK PLUG					I I I	112
*	VALVE CLEARANCE					I I I	115
	ENGINE OIL			INITIAL = 100mi(150km), 20 operating hours or 1 month : R REGULAR = Every 600mi (1000 km), 100 operating hours or 12 months : R			90
**	ENGINE OIL STRAINER SCREEN					C	—
**	ENGINE OIL CENTRIFUGAL FILTER					C	—
*	ENGINE IDLE SPEED					I I I	111

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 188 ).

\*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.

