

To replace a fuse:

1. Make sure the ignition switch is OFF ( ○ ).

**CAUTION:**

**Turn the ignition switch OFF ( ○ ) before checking or replacing the fuse to prevent accidental short-circuiting which could damage the electrical system.**

2. Remove the seat (page 124).
3. Remove the fuse holder assembly (Fig. 4-18).
4. Pull the old fuse out of the fuse holder.
5. Push the new fuse in to the fuse holder.
6. Install the fuse holder assembly and seat.

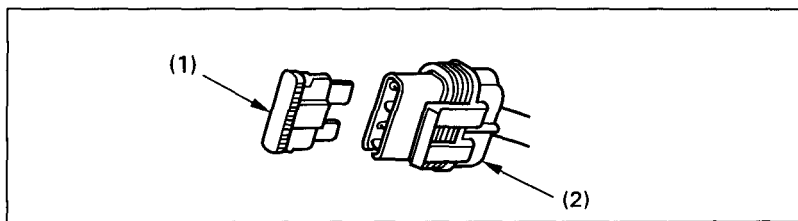


Fig. 4-19 (1) Fuse

(2) Fuse holder

**⚠ WARNING**

**POTENTIAL HAZARD**

**Improperly replacing a fuse.**

**WHAT CAN HAPPEN**

**Serious damage to the electrical system, which could cause a fire or a loss of lights or engine power, which could lead to an accident.**

**HOW TO AVOID THE HAZARD**

**Never use a fuse with a different rating from that specified in this Owner's Manual.**

**Do not pry the clips open to get a fuse out, as a loose fuse could cause damage to the electrical system or start a fire.**