

## Fuel Tank

Fuel tank capacity is 12.5 ℓ (3.3 US gal) including 2.5 ℓ (0.7 US gal) in the reserve supply. Remove the fuel tank cap (1) by twisting it counterclockwise.

Automotive petrol with a pump octane number ( $\frac{R+M}{2}$ ) of 86 or higher, or research octane number of 91 or higher may be used.

If knocking or pinging occurs, try a different brand of petrol or a higher octane grade.

### FOR AUSTRALIA:

Use unleaded fuel with a research octane number of 91 or higher.


### CAUTION:

\* *Should knocking or pinking persist while holding a steady speed on level ground, try changing brands of petrol. If knocking or pinking still persists, consult your authorized Honda dealer.*

After refueling, be sure to tighten the fuel cap firmly by turning it clockwise. Align the arrow (2) on the cap with the reference mark (3) on the fuel tank.

The fuel tank cap (1) has a fuel cap vent lever (4) with ON and OFF positions to open or close the tank vent. The lever should be turned to ON to allow fuel to flow when running the engine.

Turning the lever to OFF will prevent fuel from flowing out the vent hole when transporting the BIG RED.

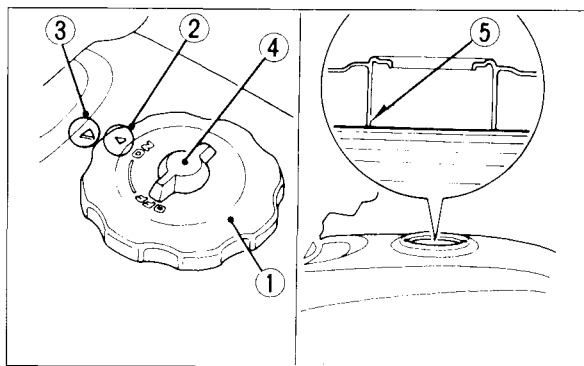

- (1) Fuel tank cap
- (2) Arrow
- (3) Reference mark

- (4) Fuel cap vent lever
- (5) Filler neck