

If the oil temperature warning lamp comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool.

**CAUTION:**

- \* Failure to stop the engine immediately after the engine oil temperature warning lamp comes on will adversely affect the service life of the engine.
- \* Do not carry or store articles on the front bumper. This may restrict air flow through the engine, causing it to overheat.

If the oil temperature warning lamp comes on often, have your TRX300FW inspected by your Honda dealer. To provide more air flow under adverse conditions, a heavy duty cooling fan is available as an optional part.

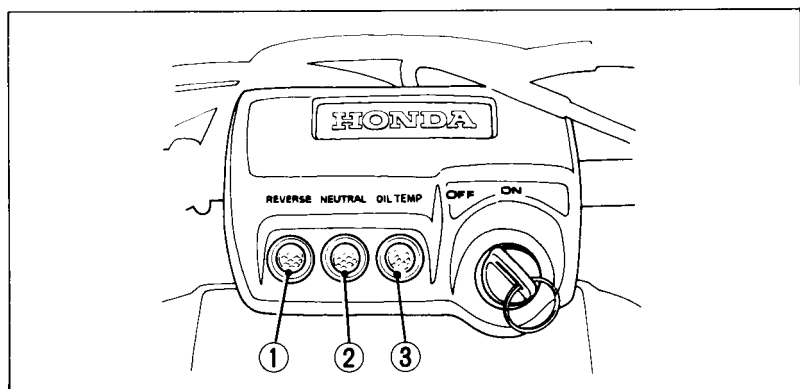


Fig. 2-18

- (1) Reverse indicator lamp
- (2) Neutral indicator lamp
- (3) Engine oil temperature warning lamp