

<b>Fuses</b>	
Location .....	111
Replacement .....	111
<b>G</b>	
<b>Gasoline (see Fuel)</b>	
Gearshift pedal .....	23
Gearshifting .....	23, 59
<b>H</b>	
Headlight switches .....	20
Helmet holder .....	29
High altitude carburetor adjustment .....	97
Hills	
Riding across slopes .....	74
Riding down hills .....	72
Riding up hills .....	65
Stopping on hills .....	67
Turning on slopes .....	75
<b>I</b>	
Idle speed adjustment .....	95
Ignition switch .....	13
Indicator lamps	
Neutral indicator lamp .....	22
Reverse indicator lamp .....	22
Inspection, pre-ride .....	36
<b>K</b>	
Kick starter .....	17
<b>L</b>	
Loading	
Loading guidelines and procedures .....	40
Weight limits .....	39
Lubrication (see Engine oil and Final drive oil)	
<b>M</b>	
Maintenance	