

STARTING THE ENGINE

Preparation

1. Select a level surface and lock the parking brake (page 25) before starting the engine.
2. Turn the fuel cap vent lever (1), fuel valve (2) and ignition switch (3) to I (ON).
3. Make sure the engine stop switch (4) is at \odot (RUN).
4. Make sure that the transmission is in neutral by checking that the neutral indicator lamp lights.

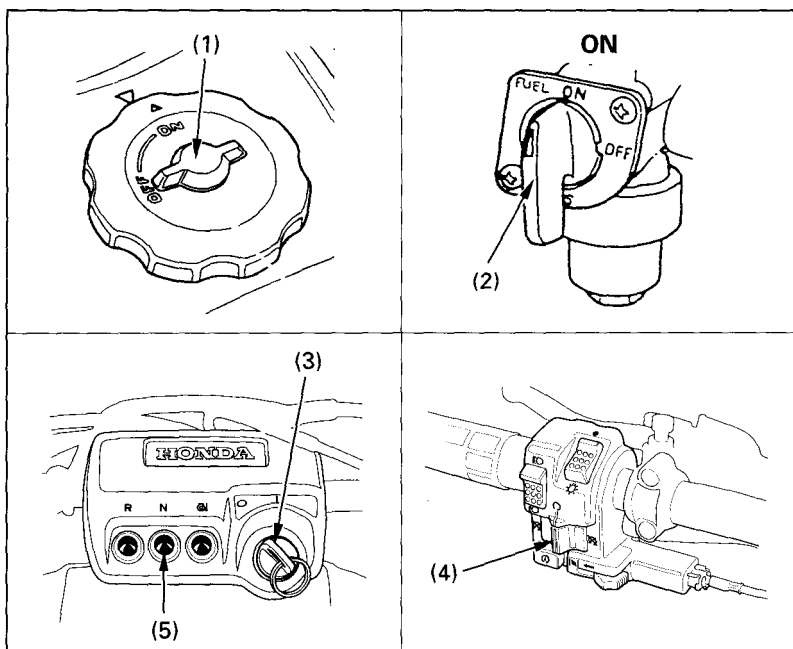


Fig. 3-8 (1) Fuel cap vent lever
(2) Fuel valve
(3) Ignition switch

(4) Engine stop switch
(5) Neutral indicator lamp