

Flooded Engine

If the engine does not start after pushing the starter button several times, it may have become flooded with excess fuel. To clear the engine:

1. Turn the engine stop switch \otimes (OFF).
2. Move the choke lever to the OFF position.
3. Hold the throttle fully open and briefly press the starter button or operate the kick starter several times.
4. When the engine is cleared, wait 10 seconds. Then turn the engine stop switch \bigcirc (RUN) and repeat the normal starting procedure, but don't use the choke.

High Altitude Adjustment

For operation above 1,000 m (3,000 feet), it may be necessary to switch to high altitude carburetor jetting (See page 95).