

MAINTENANCE SCHEDULE

D U	FREQUENCY ITEMS	Whichver comes first ⇒	INITIAL		REGULAR		Refer to page	
			NOTE	HOURS	MAINTENANCE	MAINTENANCE INTERVAL		
					mi	600		1200
					km	1000		2000
20	100	200						
EMISSION RELATED ITEM	* FUEL LINE					I	—	
	* FUEL STRAINER SCREEN					C	90,91	
	* THROTTLE OPERATION					I	92	
	* CARBURETOR CHOKE					I	97	
	AIR CLEANER	(NOTE 1)			C	C	93–95	
	AIR CLEANER HOUSING DRAIN TUBE	(NOTE 2)			I	I	96	
	SPARK PLUG				I	I	106,107	
	* VALVE CLEARANCE			I	I	I	107	
	ENGINE OIL			R	R	R	28,100,101	
	ENGINE OIL FILTER			R	R	R	102–104	
	* ENGINE IDLE SPEED			I	I	I	97	

I: Inspect and Clean, Adjust,
Lubricate or Replace if necessary.

C: Clean R: Replace

A: Adjust L: Lubricate