

Battery Removal

1. Make sure the ignition switch is ○ (OFF).
2. Remove the seat (page 130).
3. Remove the battery box cover (1) by removing the mount bolts (2).
4. Remove the battery holder (3), (Fig. 4-19) by removing the mount bolts (4).
5. Disconnect the negative (−) terminal lead (5) from the battery (6) first, then disconnect the positive (+) terminal lead (7).
6. Remove the battery.
 - * Install in the reverse order of removal.
 - * Check all bolts and other fasteners are secure.
 - * After installing the battery, check to see if the battery cables are routed correctly as shown on the label (8).