

Battery Removal

1. Make sure the ignition switch is OFF (\circ).
2. Remove the seat (page 130).
3. Remove the battery box cover (1) by removing the mount bolts (2).
4. Remove the battery holder (3), (Fig. 4-19) by removing the mount bolts (4).
5. Disconnect the negative ($-$) terminal lead (5) from the battery (6) first, then disconnect the positive ($+$) terminal lead (7).
6. Remove the battery.
 - * Install in the reverse order of removal.
 - * Check all bolts and other fasteners are secure.
 - * After installing the battery, check to see if the battery cables are routed correctly as shown on the label (8).