


Controls & Features

Ignition Switch

The ignition switch is used for starting and stopping the engine (page 58). Insert the key and turn it to the right for the ON position.

| Key Position | Function |
|--------------|----------------------------------|
| ON (I) | Electrical circuits on. |
| OFF (O) | No electrical circuits function. |

CENTER OF HANDLEBAR

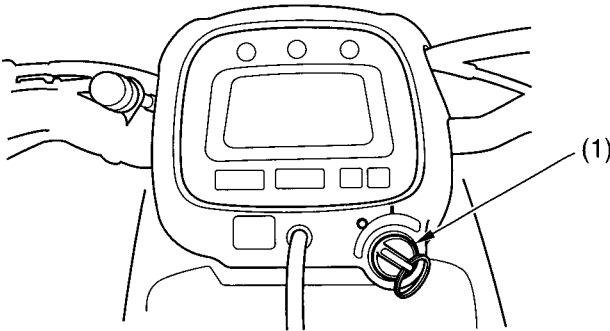

(1) ignition switch

I ON
O OFF