


# Air Cleaner

---


## Cleaning

1. Remove the seat by pulling the seat lock lever (1) up.

### UNDER SEAT

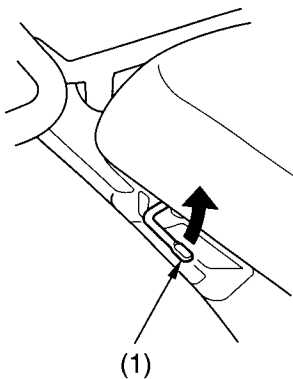

- (1) seat lock lever  
(2) retainer clips

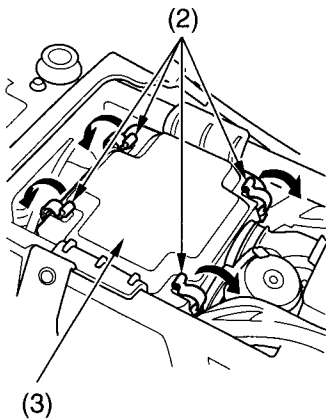

- (3) air cleaner housing cover

2. Unlatch the four retainer clips (2).
3. Remove the air cleaner housing cover (3).