

MAINTENANCE SCHEDULE

	FREQUENCY	ITEMS	Which ever comes first ↕	INITIAL		REGULAR		Refer to page	
				MAINTENANCE	MAINTENANCE INTERVAL	MAINTENANCE INTERVAL	MAINTENANCE INTERVAL		
				mi	100	600	1200		
km	150	1000	2000						
NOTE	HOURS	20	100	200					
EMISSION RELATED ITEMS	*	FUEL LINE				I	—		
	*	THROTTLE OPERATION				I	104		
	*	CARBURETOR CHOKE				I	109		
		AIR CLEANER	(NOTE 1)			C	C	105–107	
		AIR CLEANER HOUSING DRAIN TUBE	(NOTE 2)			I	I	108	
		SPARK PLUG				I	I	120–121	
	*	VALVE CLEARANCE				I	I	I	121
		ENGINE OIL				R	R	R	37, 112–116
		ENGINE OIL FILTER				R	R	R	112–116
	*	ENGINE IDLE SPEED				I	I	I	110

- I: Inspect and Clean, Adjust,
Lubricate or Replace if necessary.
C: Clean R: Replace
A: Adjust L: Lubricate