

## Recoil Starter

The recoil starter (Fig. 2-10) is on the right side of the FOURTRAX. It is used to start the engine when the battery is low.

To operate the recoil starter:

1. Unsnap and remove the recoil starter cover (2).
2. Grasp the starter grip (1) firmly, then pull it out slowly approximately 4 in (100 mm).
3. Pull the grip up briskly and fully.
4. After the engine starts, allow the starter grip to return slowly.

If the starter grip does not return smoothly (because of dirt in the assembly), see your Honda dealer.

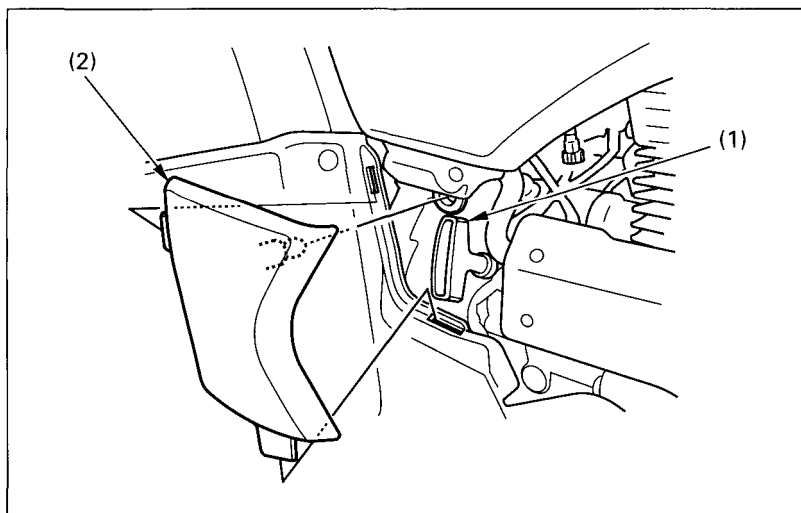


Fig. 2-10 (1) Recoil starter grip

(2) Recoil starter cover