

# Spark Plug

## Spark Plug Recommendation

standard spark plug	DPR7EA-9 (NGK) or X22EPR-U9 (DENSO)
for cold climate (below 5°C, 41°F)	DPR6EA-9 (NGK) or X20EPR-U9 (DENSO)

Use only the recommended type of spark plug in the recommended heat range.

### NOTICE

*Using spark plugs with an improper heat range can cause engine damage.*

## Spark Plug Replacement & Inspection

Refer to *Safety Precautions* on page 87 .

1. Clean any dirt from around the spark plug base.
2. Disconnect the spark plug cap ( 1 ). Take care to avoid damaging the spark plug wire when disconnecting the cap.
3. Using the spark plug wrench provided in the tool kit, remove the spark plug.

(cont'd)