

2. Remove the seat (page 140).
3. Remove the rear fender lid (page 119 ).
4. Remove the fuse box cover (page 121 ).
5. Pull the old fuse out of the clips.
6. Push a new fuse into the clips and install the fuse box cover.
7. Install the rear fender lid.
8. Install the seat.

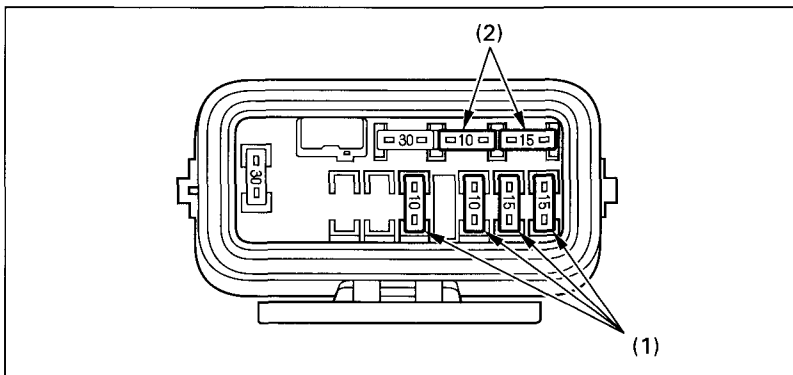


Fig. 4-22 (1) Sub fuses

(2) Spare fuses

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Improperly replacing a fuse.**

### **WHAT CAN HAPPEN**

**Serious damage to the electrical system, which could cause a fire or a loss of lights or engine power, which could lead to an accident.**

### **HOW TO AVOID THE HAZARD**

**Never use a fuse with a different rating from that specified in this Owner's Manual.**

**Do not pry the clips open to get a fuse out, as a loose fuse could cause damage to the electrical system or start a fire.**