


VALVE CLEARANCE

Valve clearance should be maintained at 0.08 mm (0.003 in). Excessive clearance will cause noise. Insufficient clearance will cause loss of power and could cause valve damage.

NOTE:

* Check and adjust valve clearances while the engine is cold. The clearance will change as the temperature rises.

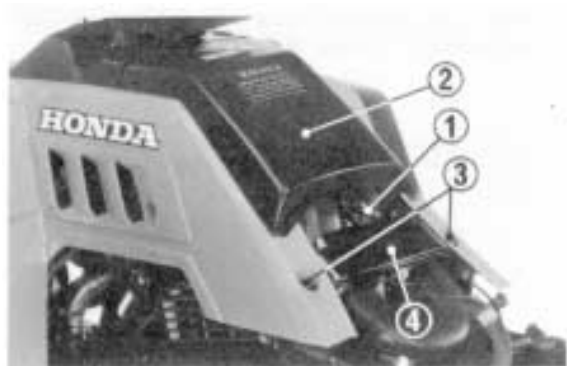

- (1) Air cleaner case top cover
- (2) Wing bolt
- (3) Mount bolts
- (4) Cross member plate

1. Turn the fuel valve OFF and disconnect the fuel line at fuel valve.
2. Remove the seat. Remove the air cleaner case top cover (1) by removing the wing bolt (2).
3. Remove the front fender mount bolts (3) and the cross member plate (4).
4. Remove the front fender top cover (5).



- (5) Front fender top cover