

Spark Plug

Spark Plug Recommendation

standard spark plug	DPR7EA-9 (NGK) or X22EPR-U9 (DENSO)
for cold climate (below 5°C, 41°F)	DPR6EA-9 (NGK) or X20EPR-U9 (DENSO)

Use only the recommended type of spark plug in the recommended heat range.

NOTICE

Using spark plugs with an improper heat range can cause engine damage.

Spark Plug Replacement & Inspection

Refer to *Safety Precautions* on page 91 .

1. Clean any dirt from around the spark plug base.
2. Disconnect the spark plug cap (1). Take care to avoid damaging the spark plug wire when disconnecting the cap.
3. Using the spark plug wrench provided in the tool kit, remove the spark plug.

(cont'd)