

Removal from Storage

Refer to *Safety Precautions* on page 85 .

1. Uncover and clean your ATV.
2. If your ATV has been stored for more than four months — change the engine oil (page 104).
3. If your ATV has been stored for more than two months — ask your Honda dealer to drain and replace the fuel.
4. Charge the battery (page 150) as required. Install the battery.
5. Perform a pre-ride inspection (page 41), then test-ride your ATV at low speeds.