


If You Have a Flat Tyre


Emergency Wheel Removal/Installation

Refer to *Safety Precautions* on page 85 .

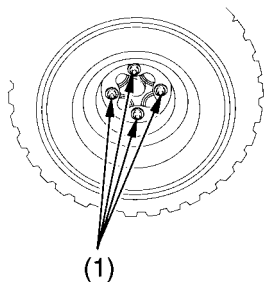

(1)

(1) wheel nuts

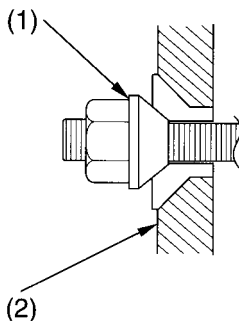

(1)

(2)

(2) wheel rim

Removal

1. Park your ATV on a firm, level surface.
2. Raise the front (or rear) wheels off the ground and place a support block under the vehicle.
3. Remove the wheel nuts (1) with a 17 mm socket wrench.
4. Remove the wheel.