


If a Fuse Blows

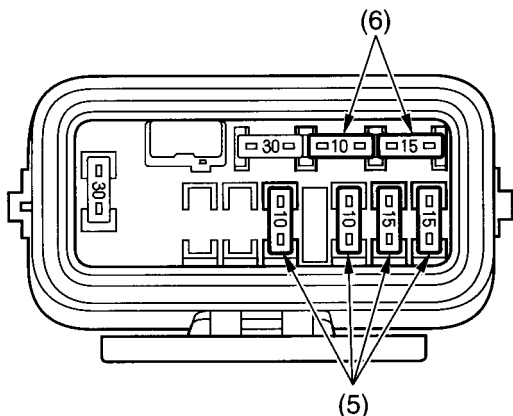

(5) circuit fuses

(6) spare fuses

Circuit Fuse Access

6. To check or replace a circuit fuse (5), pull the old fuse out of its retaining clips.

If the fuse is blown, replace it with a spare fuse (6) of the same rating or lower.

7. Install the fuse box cover.
8. Install the rear fender lid.
9. Install the seat.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.