

MAINTENANCE SCHEDULE

	FREQUENCY	Which ever comes first	INITIAL		REGULAR		Refer to page		
			ITEMS	↪	MAINTENANCE	MAINTENANCE		INTERVAL	
					mi	100		600	1200
					km	150		1000	2000
NOTE	HOURS	20	100	200					
EMISSION RELATED ITEMS	*	FUEL LINE				I	—		
	*	THROTTLE OPERATION				I	86		
		AIR CLEANER	(NOTE 1)			C	C	87—89	
		AIR CLEANER HOUSING DRAIN TUBE	(NOTE 2)			I	I	90	
		SPARK PLUG				I	I	105	
	*	VALVE CLEARANCE				I	I	106	
		ENGINE OIL				R	R	R	25,94—96
		ENGINE OIL FILTER				R	R	R	97—100
	*	ENGINE OIL STRAINER SCREEN IN OIL TANK					C	—	
	*	ENGINE IDLE SPEED				I	I	I	91

I: Inspect and Clean, Adjust,
Lubricate or Replace if necessary.

C: Clean R: Replace

A: Adjust L: Lubricate