


Riding in Reverse


5. While turning the reverse assist knob, depress the shift lever to reach the reverse gear (below 1st gear). Make sure that the reverse indicator (4) comes on.
6. Remove your right hand from the reverse assist knob.
7. Release the rear brake pedal.
8. Slowly release the clutch lever/parking brake lever and open the throttle gradually to begin reverse operation.

RIGHT SIDE

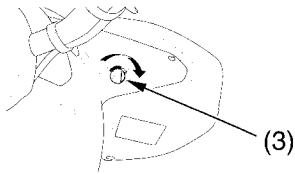

(3) reverse assist knob

CENTER OF HANDLEBAR

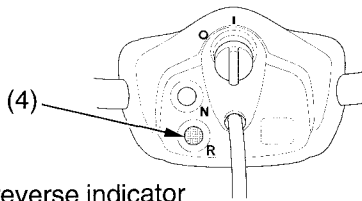

(4) reverse indicator

9. Ride slowly. Do not open the throttle suddenly or make abrupt turns.
10. To stop, pull in the clutch lever/parking brake lever, close the throttle and gradually apply both the front and rear brakes. Do not abruptly apply the rear brake by itself.
11. To shift out of reverse into 1st gear, pull in the clutch lever/parking brake lever and raise the shift lever one click to 1st gear. Make sure that the reverse indicator goes off.

⚠ WARNING

Applying only the rear brake abruptly when operating in reverse gear could cause the front wheels to lift off the ground and the ATV could overturn backwards.

Carefully apply both the front and rear brakes when stopping in reverse gear.