


Engine Oil & Filter

Crankcase Oil Level Check

Check the crankcase oil level.

Do not check the oil level immediately after the engine has been operated at high speeds because the oil level reading will be inaccurate.

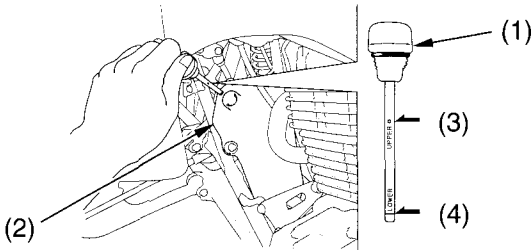

(1) oil filler cap/dipstick


(2) oil tank

(3) UPPER level mark

(4) LOWER level mark

Remove the oil check bolt (5) and washer.

- If oil flows out of the check bolt hole, install and tighten a new oil check bolt and washer and proceed to the Oil Tank Level Check.
- If oil does not flow out of the check bolt hole, install and tighten a new oil check bolt and washer and add the recommended engine oil to the oil tank up to the LOWER level mark on the dipstick.

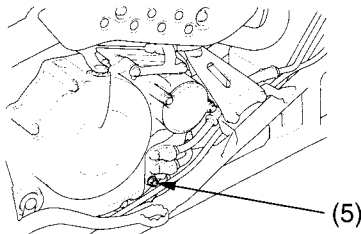

(5) oil check bolt (crankcase)

Proceed to the Oil Tank Level Check.