

Suspension

Rear Suspension Adjustment

The rear suspension can be adjusted for rider weight and riding conditions by changing the rebound and compression damping.


The rear shock absorber assembly includes a damper unit that contains high pressure nitrogen gas. Do not attempt to disassemble, service, or dispose of the damper; see your Honda dealer. The instructions found in this owner's manual are limited to adjustments of the shock assembly only.

Rear Suspension Damping

Refer to *Safety Precautions* on page 75.

Rebound Damping

LEFT REAR

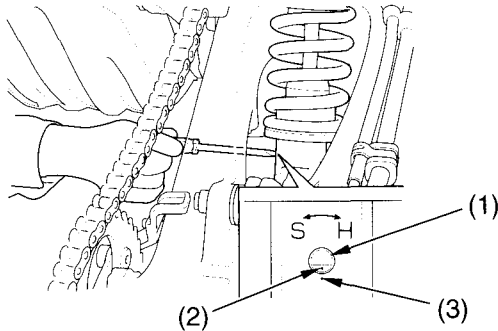

- (1) damping adjuster
- (2) punch mark
- (3) reference punch mark